

Installation Instructions

Holden Commodore (2010-12)



Step

Instructions

1

Remove lower control panel & storage box



2

Unscrew 2 bolts



3

Plastic L+R trim pieces



4

Unscrew 2 bolts



5

Remove top speaker panel & unscrew 2 bolts




6 Carefully remove central trim panel (careful not to break horizontal central arm)




7 Unplug & remove central fascia



8 Install L+R side brackets onto centre console (4 screws)

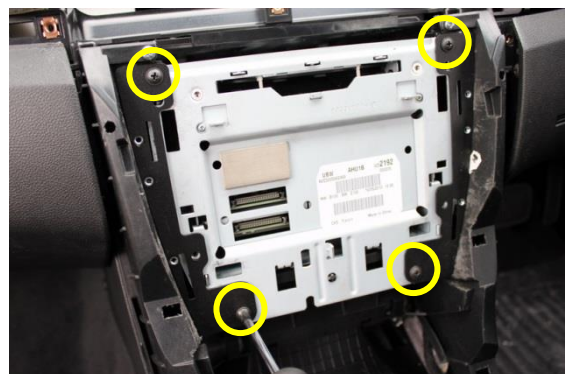

-
- 9** Align the dash bracket & push it up into place. Screw in 6 screws

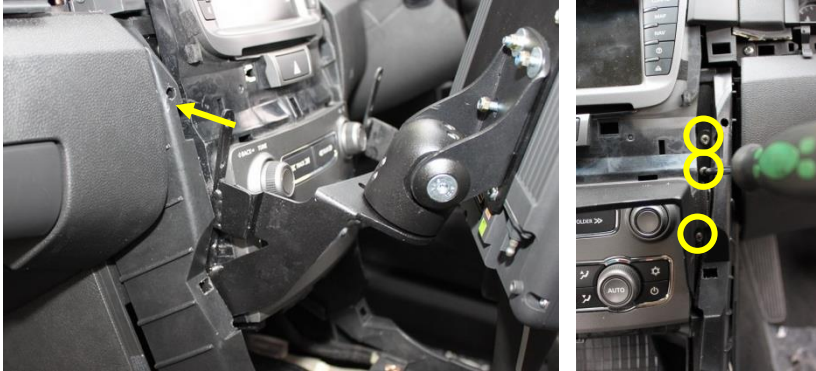

-
- 10** Plug in & reinstall central fascia from Step 7



-
- 11** Reinstall central trim panel from Step 6

-
- 12** Reinstall speaker panel from Step 5. Fasten 2 bolts

-
- 13** Fasten 2 bolts from Step 4

-
- 14** Reinstall plastic L+R trim pieces from Step 3

-
- 15** Fasten 2 bolts from Step 2

-
- 16** Reinstall storage box & lower control panel from Step 1

If you have any issues or questions, please contact us.

Industrial Evolution