

## Installation Instructions

Toyota Hilux (2016+)



Step

Instructions

1

Loosen left & right trim panels with integrated A/C vents




2

Remove these two panels



**3** Remove 8 screws surrounding of A/C control panel

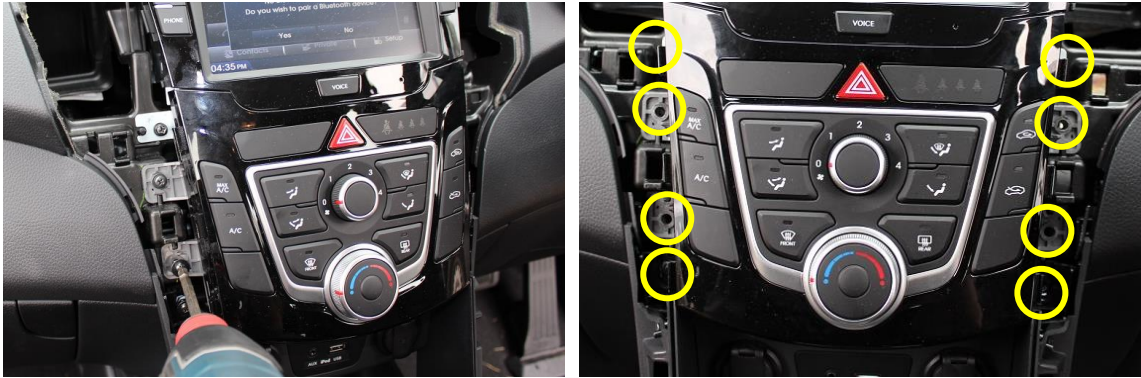

**4** Install Part 1 (left & right) using the same 8 screws



**5** Reinstall (snap in) the side panels from Steps 1 & 2



6

Install Part 2 using the 4x black countersunk screws provided



7

Enjoy your new InDash Mount!



If you have any issues or questions, please contact us.  
**Industrial Evolution**