

Installation Instructions
Hyundai iLoad (2016+)



Step

Instructions

1

Carefully remove and unplug lower gear stick cover.



2

Remove 3 x screws.



3

Carefully pop centre control unit with air vents.



4

Unplug wires.



5


Remove 2 x M6 Screws & 2 x self-tapper screws



Install side brackets.

6.

Make sure the brackets are fitted and secured behind the plastic lips.

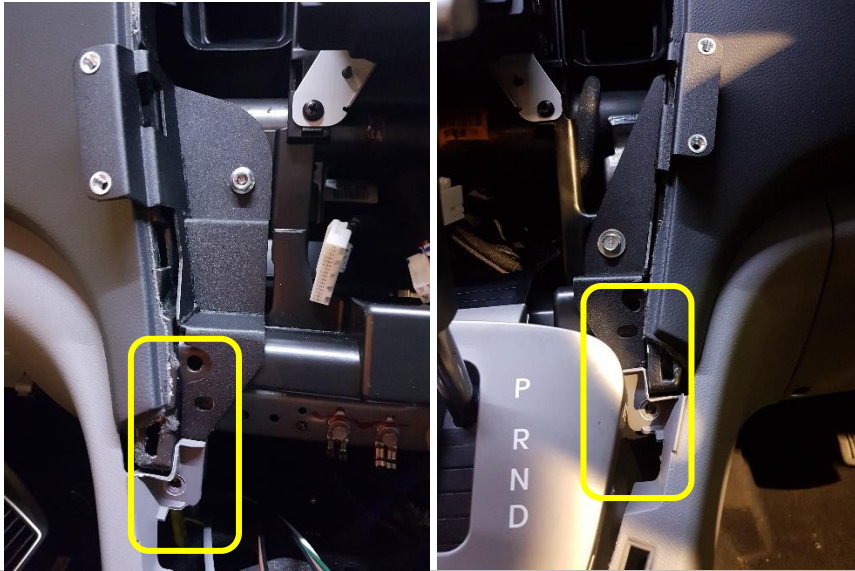

7

Re-install centre console, including all wires.
Re-install gear stick cover.



9

Install dash bracket with 4x countersunk M5 screws provided.



Enjoy your new In Dash Mount!



If you have any issues or questions, please contact us.

Industrial Evolution.