

Installation Instructions Hyundai iLoad (2019+)



Step

Instructions


1

Carefully lever and remove lower gearstick cover.



2

Remove 5x screws, as pictured.

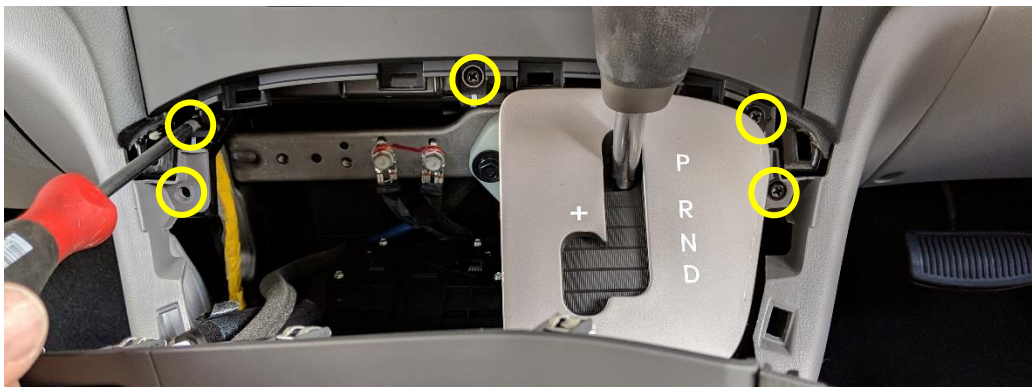

3

Loosen A/C unit cover and air vents



4

Change gear to N, ensuring handbrake is engaged. Unplug and remove A/C unit, vents and cover. Return gear to P.



5

Remove 2x screws.




6 Install L+R brackets, as pictured, using screws removed in Step 5.



7 Change gear to N, ensuring handbrake is engaged. Plug and replace A/C unit, vents and cover.



8 Return gear to P, and replace 5x screws removed in Step 2.

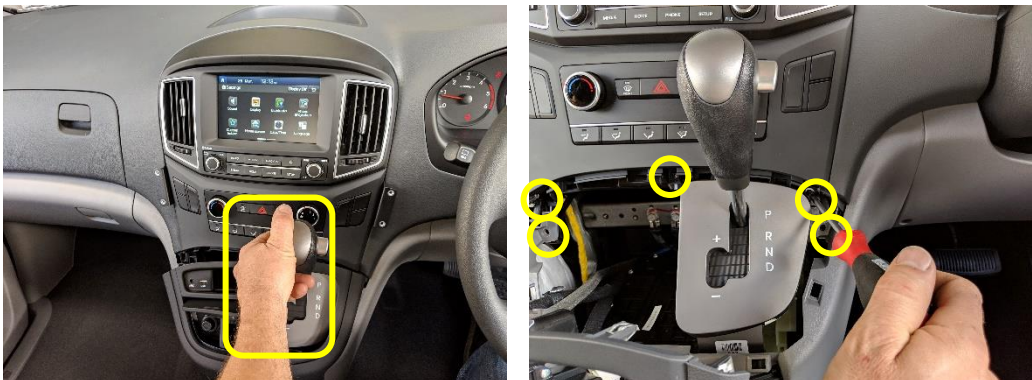

9

Replace gearstick cover moved in Step 1.



10

Install front bracket using 4x countersunk screws provided.



Enjoy your new In Dash Mount!

If you have any issues or questions, please contact us.

Industrial Evolution