

Industrial Evolution Pty Ltd Unit 27/159 Arthur Street Homebush West 2140 NSW TEL +61 2 9763 5300 FAX +61 2 9763 5399 ABN 13 108 256 766 www.industrialevolution.com.au

Installation Instructions


Toyota LandCruiser 200 (2016+)



Step

Instructions

1

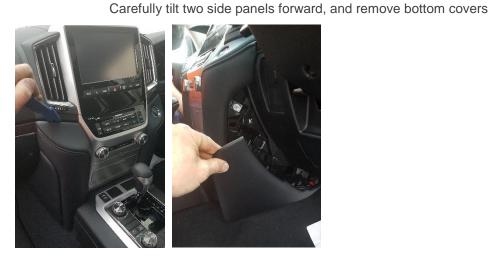

2

Remove screws so side panels can be removed completely, and unplug cords





Industrial Evolution Pty Ltd Unit 27/159 Arthur Street Homebush West 2140 NSW TEL +61 2 9763 5300 FAX +61 2 9763 5399 ABN 13 108 256 766 www.industrialevolution.com.au

3

Remove centre console screws on either side



4 Remove air vents and screws on either side. 6 x In-total screws. 4 x In front & 2 x Inside



- 5
- Install side brackets and secure with 3x original screws. 2 x In front & 1 x Inside each side.



PRODUCT DESIGN SOLUTIONS • EQUIPMENT & BRACKET DESIGN • ELECTRONIC PRODUCT DESIGN • PROTOTYPES • CAD DESIGN & ENGINEERING



Industrial Evolution Pty Ltd Unit 27/159 Arthur Street Homebush West 2140 NSW TEL +61 2 9763 5300 FAX +61 2 9763 5399 ABN 13 108 256 766 www.industrialevolution.com.au

6

Re-install air vents, thin strip and lower panel





Install dash bracket with 4x countersunk M5 screws provided



Enjoy your new In Dash Mount!



If you have any issues or questions, please contact us.

Industrial Evolution.