

## Installation Instructions

### Toyota Prado (2018+) In-dash Mount



Step

Instructions


1

Carefully lever and remove L+R soft trim pieces, as pictured.



2

Lever, remove and unplug A/C unit.

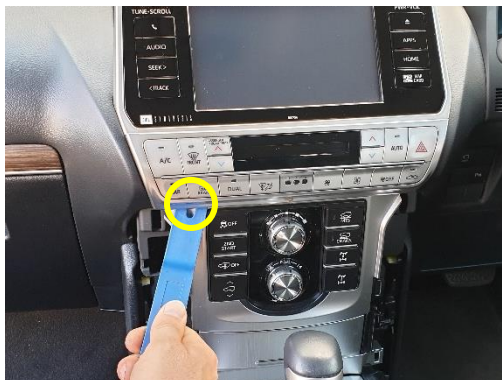

3

Remove screws on L+R side.



4

Remove 4x screws beneath digital display and lift display lightly. Do not remove / unplug.



5

Slide L+R brackets under the digital display metal tabs, as pictured.



- 6 Replace digital display and 4x screws removed in Step 5, and A/C unit to secure L+R brackets.



- 7 Replace screws on L+R sides removed in Step 3.



- 8 Plug in and replace A/C unit.



8

Replace L+R soft trim pieces.



9

Install front bracket using 4x black countersunk screws provided



If you have any issues or questions, please contact us.  
**Industrial Evolution**