

Installation Instructions

Toyota Prado (2010+) In-dash Mount



Step

Instructions

1

Remove & unplug A/C control unit



2

Remove 2 L+R soft trim pieces. Unplug passenger seatbelt warning light



3

Remove storage unit




4

Partially remove lower switch panel. Do not unplug




5

Align L+R side brackets to rear of storage unit

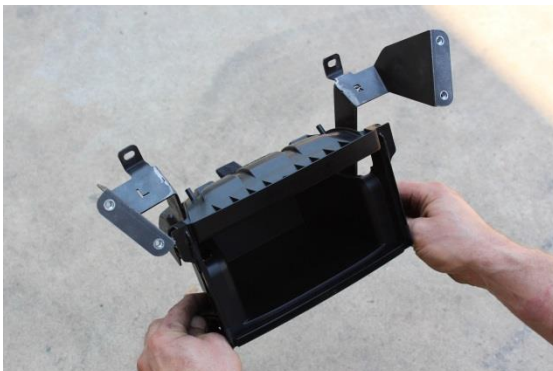

6

Install L+R side brackets with storage bracket

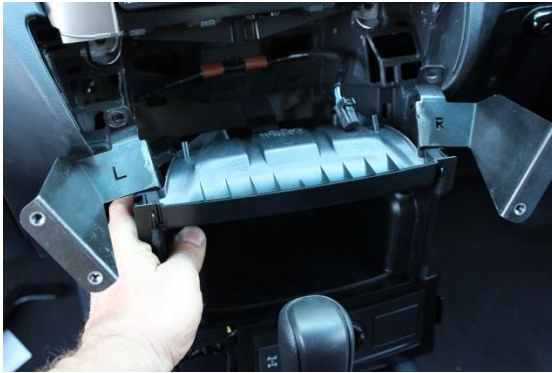

7

Install side brackets with 4 screws



8

Push in lower switch panel



9

Re-plug & install trim pieces from step 2




10

Re-plug & install A/C control unit



11

Install front plate using 4 countersunk screws provided

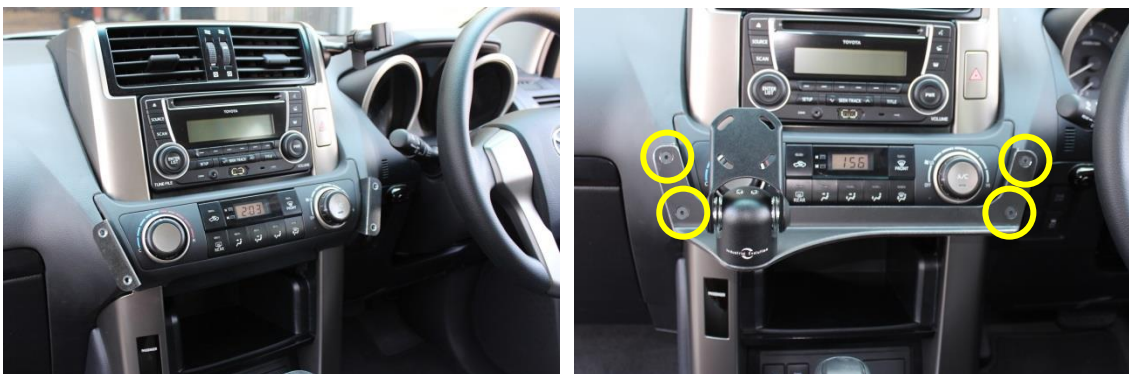

If you have any issues or questions, please contact us.
Industrial Evolution