

## Installation Instructions


### Volkswagen Passat (2018+) In Dash Mount



Step

Instructions

- 1 Carefully lever and remove plastic trim around display starting from the base.

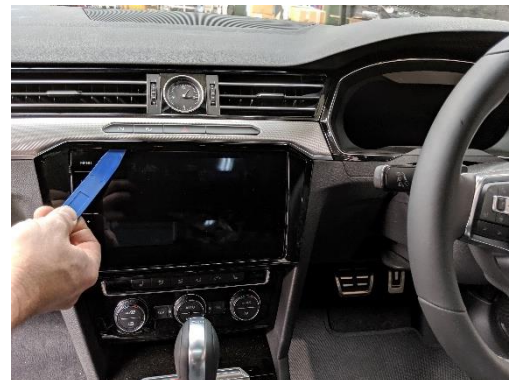

- 2 Push 2 x small levers towards outer side to unclip display screen from base, hold up.





- 3 Push 2 x small levers towards outer side to unclip display screen from top.  
Remove & unplug digital display.



- 4 Lever and remove plastic trim around A/C controls.



- 5 Pull to loosen 4x plastic push buttons around A/C controls.

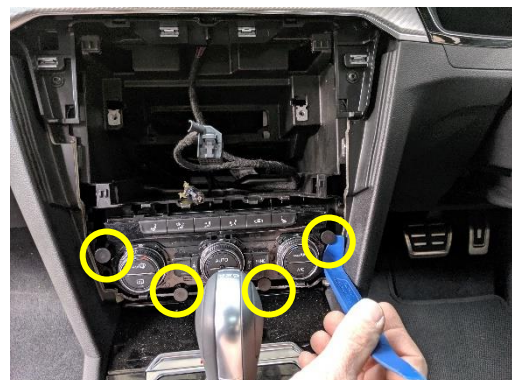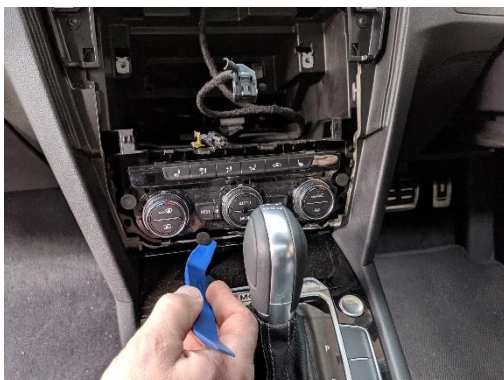


6

Remove and unplug A/C unit.



7

Lever plastic only. Slide metal bracket inside gap as shown, fit hard into corner.

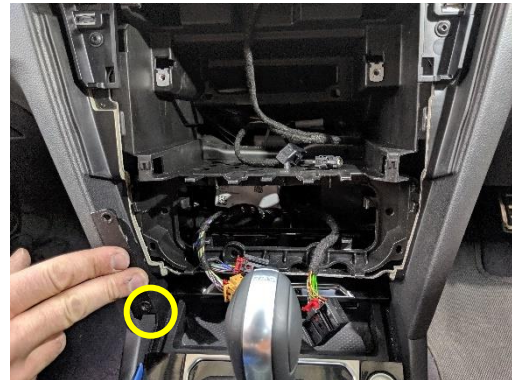

8

Secure side bracket using 2x self tapping screws provided.



- 9** Place upper bracket, and line up screws with existing large holes.



- 10** Place flat upper plate and secure to upper bracket with 3x nuts/washers provided.



- 11** Plug in and replace digital display.



**12**

Replace plastic trim around digital display.



**13**

Plug in and replace A/C unit, pushing in 4x plastic push buttons.



**14**

File down plastic tabs on the plastic trim around A/C controls, as shown. Remove plastic up to metal tab on the back side. Do not remove any metal.




**15**

Replace plastic trim around A/C controls starting from top down.



**16**

Install front bracket using 4x countersunk screws provided.

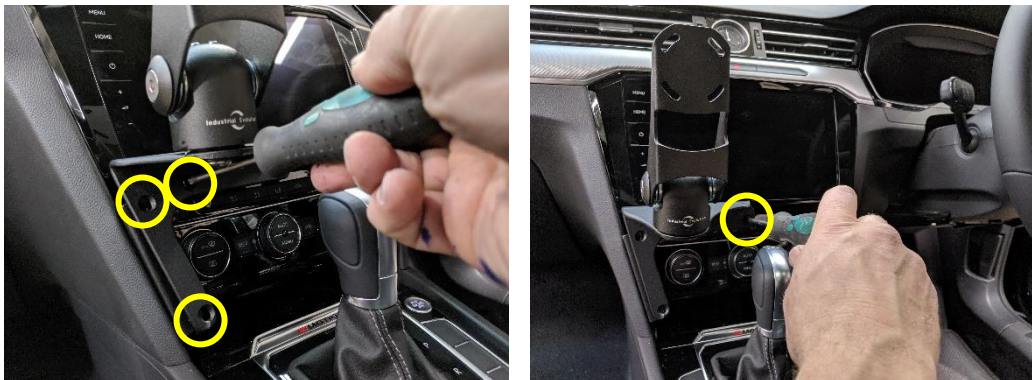

If you have any issues or questions, please contact us.  
**Industrial Evolution**